

FUSES

Table 5.2 Fuse Table

Fuse Name	Fuse Current	Type	Fuse Voltage
Coil Driver C5	6.3A	5x20 Slow Blow	250V
	6.3A	5x20 Slow Blow	250V
Coil Driver C6	6.3A	5x20 Slow Blow	250V
	4A	5x20 Slow Blow	250V
Main Fuse	6A	3AG Slow Blow	250V

Note: For more information on fuse locations, please refer to the Dipswitch Settings drawing in the Switch Locations chapter.