

## Hotwheels—Audio connection and settings

Connect the noise filter audio jacks as follows: Put the male end in the computer, and the female end that has the male-to-male pigtail in the amp.

If you're still getting a bit of buzz from the speakers, try turning down the treble a bit till it stops.

Amp settings:

Sub volume = about 1/8 turn

Cross over = full clockwise turn all the way up

Treble = 3/4 turn

Bass = 3/4 turn

Volume = Crank to 11 ;)

Note: If you're still getting feedback from the speakers after these adjustments, there may be a fault with the noise filter.

