	<b>GAME #</b> <b>GAM0003-00/GAM0003-01</b>	<b>Document Number:</b> DOC0018-00 (G3 API KNOCKER KIT (KIT0002-01) INSTALLATION GUIDE)	<b>DATE</b>	<b>DESCRIPTION</b>	<b>REV</b>	<b>ORIGINATOR</b>	<b>APPRVED BY</b>
			07/27/2020	INITIAL RELEASE	A	MP	<input checked="" type="checkbox"/> Quality (SMA)
							<input checked="" type="checkbox"/> Manufacturing (MV)
<b>DEPARTMENT: KIT INSTALLATION GUIDE</b> <b>TOTAL PAGES: 3</b>							

## KNOCKER KIT INSTALLATION:


### PROCEDURE:

Parts Needed: Klocker Kit.

Tools Needed: ¼" Nut Driver.

### INSTRUCTIONS:

1) Review your kit to make sure everything is included.

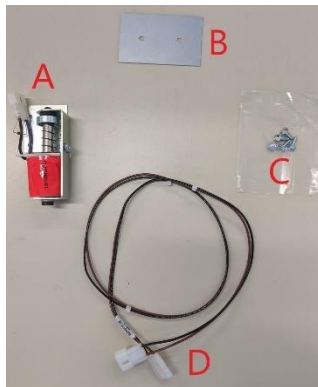



#	Qty	Description
A	1	Coil and bracket
B	1	Klocker Plate
C	5	1/4" Screws
D	1	Cable

2) Make sure the game is powered off and unplugged. Raise the Playfield so it is resting against the head.






3) Install Knocker Plate (B) with 2 screws (C) in pre-drilled mounting holes, near the Plum Bob Tilt.

4) Position the Knocker (A) over the 3 pre-drilled mounting holes and Fasten with 3 Screws (C).

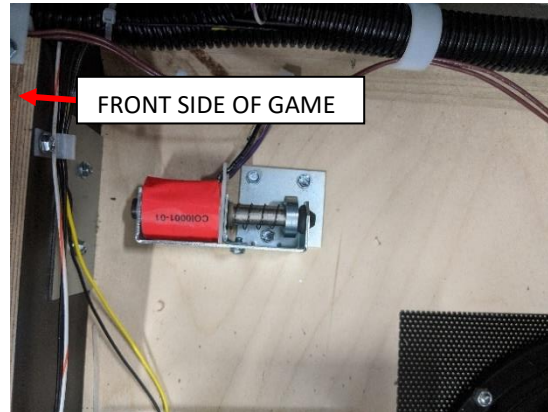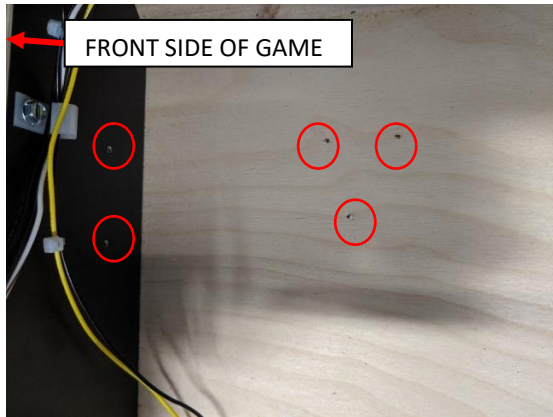

5) Now, open the cable (D) in given kit and connect one end of the cable as shown in below picture. Then put this cable in the guided cable pin and connect other end to the WCA0117-01 cable.

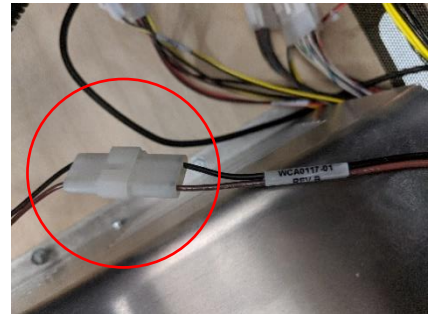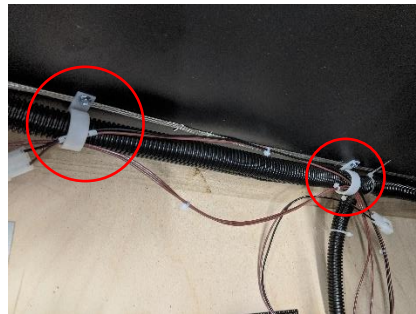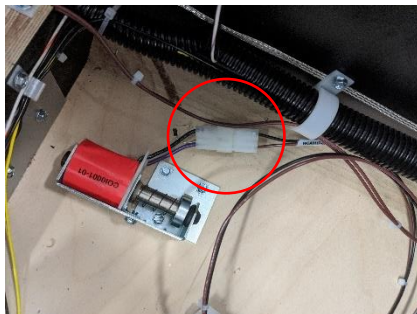

9) Lower the playfield, plug in the machine and power on.

10) Now, go to TESTS menu.





11) In TESTS go to COILS.



12) Then, go to KNOCKER.



13) Turn on 48 V COIN DOOR POWER SWITCH (Pull it) then, hit START BUTTON.

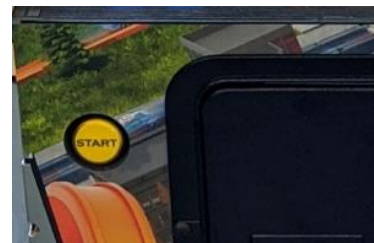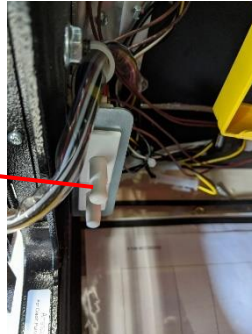

**NEED HELP?**

**833-API-HELP**